

ALGUNOS CÓDIGOS TV LG

04FB00FF	PROGRAM +
04FB01FE	PROGRAM -
04FB02FD	VOL +
04FB03FC	VOL -
04FB40BF	CURSOR UP
04FB41BE	CURSOR DOWN
04FB06F9	CURSOR RIGHT
04FB07F8	CURSOR LEFT
04FB08F7	POWER ON/OFF
04FBC43B	POWER ON
04FBC53A	POWER OFF
04FB09F6	MUTE
04FB10EF	0
04FB11EE	1
04FB12ED	2
04FB13EC	3
04FB14EB	4
04FB15EA	5
04FB16E9	6
04FB17E8	7
04FB18E7	8
04FB19E6	9
04FB0BF4	INPUT
04FBBF40	COMPONENT
04FBC639	HDMI
04FBD52A	RGB
04FBD629	TV
04FB5AA5	AV1
04FBD02F	AV2
04FBD12E	AV3
04FBD22D	AV4
04FBD32C	SAV2
04FB7689	4:3
04FB7788	16:9
04FBAF50	ZOOM